



TEXAS ROTO-CLEANER

Betjeningsvejledning

DK

Montering:

Afmonter den yderste lansedel på højtryksrenseren (behold mellemstykket). Monter det nye forlængerstykke (1) og terrassevaskeren (2). Pres endestykkerne ind i hinanden og drej med uret indtil de låser.

Betjening:

Lad terrassevaskeren gøre arbejdet. Tryk den ikke hårdt ned mod fliserne, men lad den glide fra side til side. Vandtrykket vil give en svævende effekt, som er størst, når vandtrykket er indstillet til max.

Lad aldrig terrassevaskeren glide ud over en kant, da den vil blive slæt i stykker.

Lav altid en prøverensning før du går i gang med at rense store arealer.

Justerering:

Vandtrykket mod fliserne kan justeres ved at hæve/sænke propellen med vanddyserne.

Sluk for maskinen først, og træk ud i håndtaget (3).

Tilpas højden og pres håndtaget (3) ind igen.

Der er vigtig at håndtaget (3) er presset helt ind, så holderen er i indgreb, inden terrassevaskerne bruges igen. Vær forsiktig når højden justeres, træk ikke hårdt!

Terrassevaskeren skal, ligesom højtryksrenseren, altid opbevares frostfrit.





TEXAS ROTO-CLEANER

User manual

GB

Assemble:

Dismount the lance part from the high pressure cleaner (keep the extension unit). Mount the new extension unit (1) and the patio cleaner (2). Connect pieces and twist them to the left until they lock.



Operation:

Let the patio cleaner do the work. Don't press it hard towards the ground, but let it slide from side to side. The water pressure will give a hovering effect, which is most effective, when the water pressure is adjusted to the max.



Never let the patio cleaner slide over edges.

It might result in damage to the cleaner.

Always perform a small test before you start cleaning larger areas.



Adjustment:

The water pressure against the ground can be adjusted by raising/lowering the propeller with the water outlets. Turn off the machine first, and pull out the handle (3). Adjust the height and press the handle (3) back again.



It is very important, that the handle (3) is pressed correctly back, so that the adjustment is locked before you use the cleaner again.

The floor cleaner must not be exposed to frost during storage.

