


DS1000 DROP SPREADER



ASSEMBLY INSTRUCTIONS & PARTS LIST

9/99

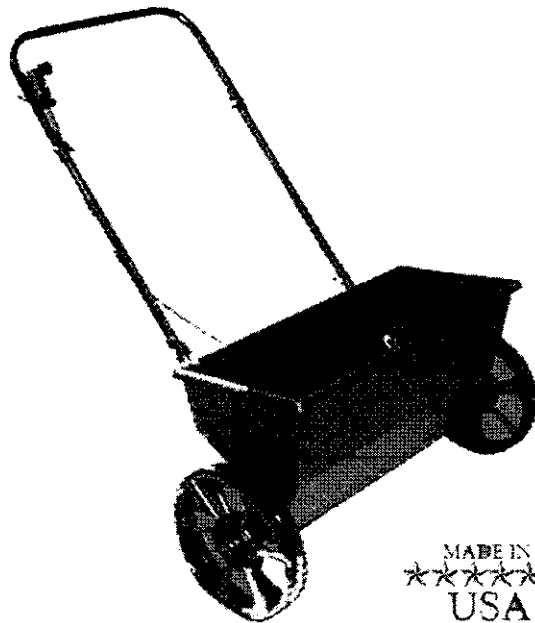

MADE IN

USA

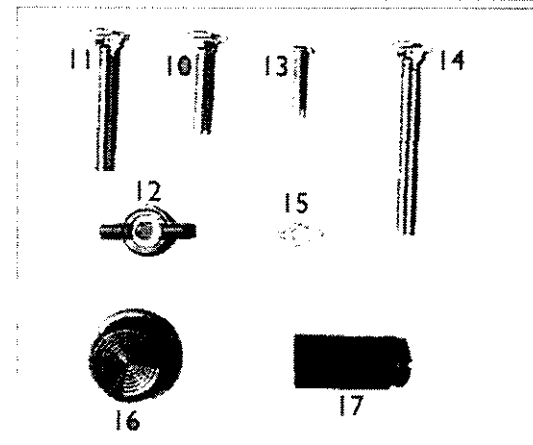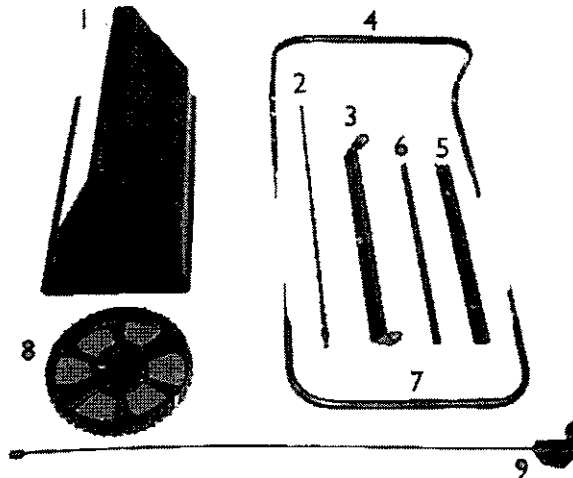

PLEASE DO NOT RETURN THIS MERCHANDISE TO THE STORE. CALL US AND WE WILL TAKE CARE OF ANY PROBLEM YOU MIGHT HAVE WITH THIS PRODUCT. Phone (800) 225 - 5891 EXT. #226

HOW TO ORDER PARTS

When ordering parts always give model number, part number, part description and inspector number.

Send To: Parts Division
316 Limit Street
Lincoln, IL 62656

Phone (217) 735 - 1590
FAX (217) 735 - 2435

LIMITED WARRANTY

This unit is warranted against defects in materials and workmanship to the original purchaser, under normal use and service, for a period of ninety (90) days from date of sale. During the Warranty Period, we will repair or replace at our option free of charge to the original purchaser, any part of the Unit that our examination shows to be defective in workmanship or materials. This Warranty **Does Not** apply to damage caused by misuse, abuse, neglect, accident, normal wear, or alterations by unauthorized persons.



PRECISION PRODUCTS, INC.

Retain For Future Reference

Parts List * DS1000


Ref No	Parts No	Description	Qty	Ref No	Parts No	Description	Qty
1	2420	Hopper	1	15	1181	3/16" Wing Nut	2
2	2421	Axle	1	16	1040	1/2" Hubcap	2
3	2674	Flow Bar	1	17	2679	1-7/16" Split Spacer	2
4	2449	Leg Stand	1				
5	1113	Agitator Bar	2				
6	1107	Side Handle	2				
7	1108	Top Handle	1				
8	1917D]	Wheel	2				
9	2442	Control Cable Assembly	1				
10	1407	1/4" x 1-1/4" Carriage Bolt	4				
11	1408	1/4" x 1-3/4" Carriage Bolt	4				
12	1269	1/4" Wing Nut	9				
13	1177	3/16" x 7/8" Round Head Bolt	2				
14	1868	1/4" x 2-1/4" Carriage Bolt	1				

TIP: Many of these hardware parts can be purchased at your local hardware store.



ASSEMBLY INSTRUCTIONS:

DS1000 Drop Spreader

ASSEMBLY TIP: Loosely tighten nuts and bolts at first. Fully tighten when the unit is completely assembled.


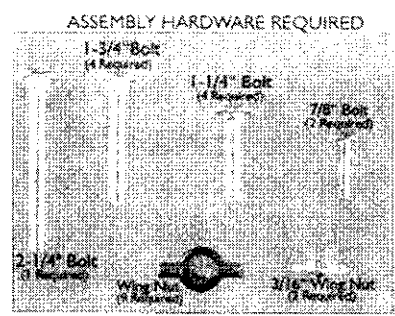


STEP 1 A. Bolt Agitator Bars to each side of the Axle with 7/8" Bolts and 3/16" Wing Nuts.

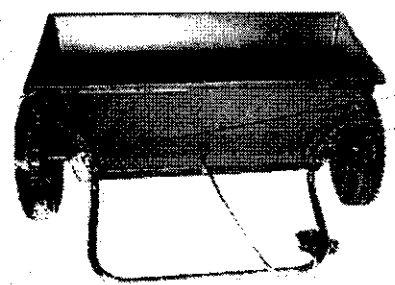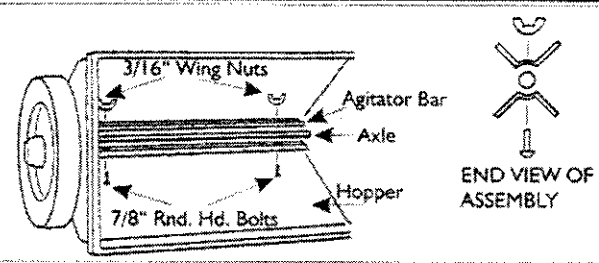

B. Attach the Leg Stand using 1-1/4" Carriage Bolts and


STEP 2 A. Attach the Side Handles to the Leg Stand using 1-3/4" Carriage Bolts and Wing Nuts.

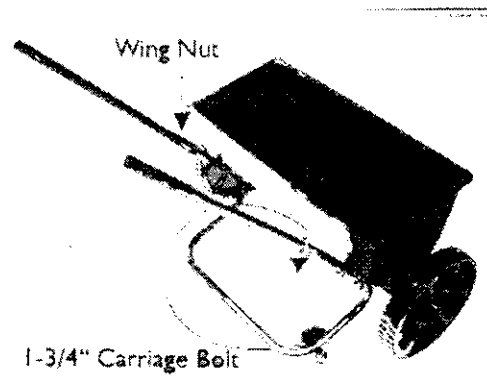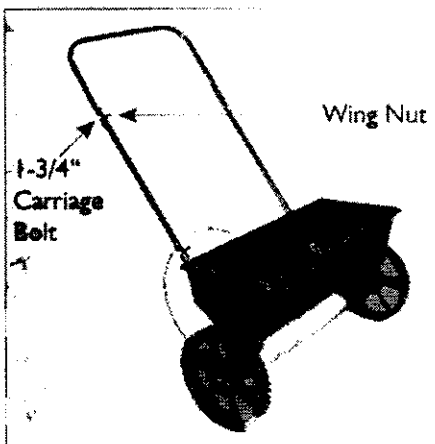

B. Attach the Top Handle to the Side Handles using 1-3/4" Carriage Bolts and Wing Nuts.



STEP 3

A. Attach Control Cable Assembly by passing 2-1/4" Carriage Bolt through Cable Assembly and Handle. Secure with Wing Nut.

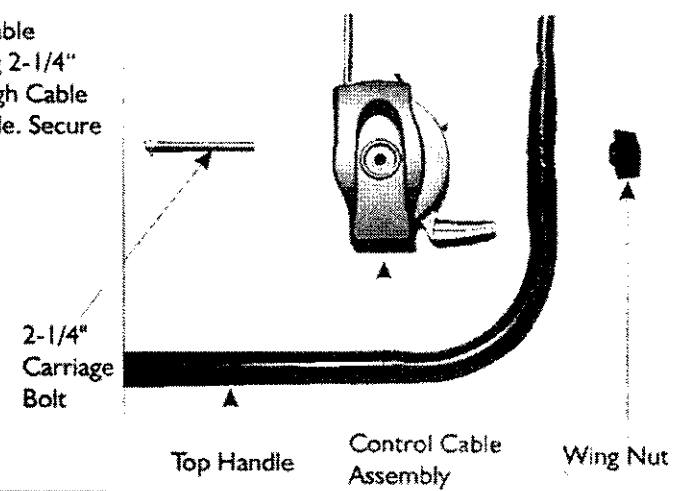

USING YOUR SPREADER

Settings are made by pressing down on the Calibration Indicator Button and setting to desired number on the Control Cable Assembly.

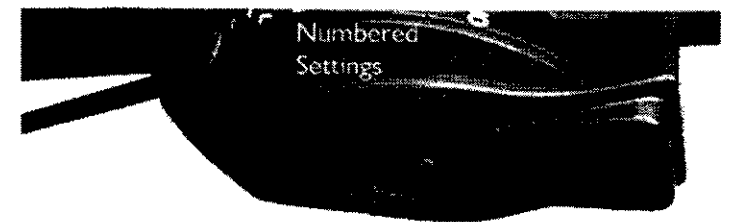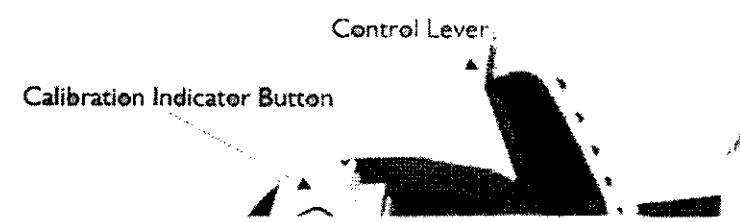

- **TO OPEN** - Push the Control Lever forward until it stops against button
- **TO CLOSE** - Pull the Control Lever fully back.

See Application chart for setting information.

MAINTENANCE INSTRUCTIONS

AFTER EACH USE: Wash unit thoroughly let dry. Lubricate moving parts, including flow bar, axle, and agitator bars.

CAUTION

CARE MUST BE TAKEN WITH ANY WEED KILLER, PESTICIDE, OR COMBINATION PRODUCT. THEY CAN BE HARMFUL TO OTHER PLANT LIFE IN THE YARD.