


# MODEL 425607x52A

# REPAIR PARTS CHASSIS & HOOD

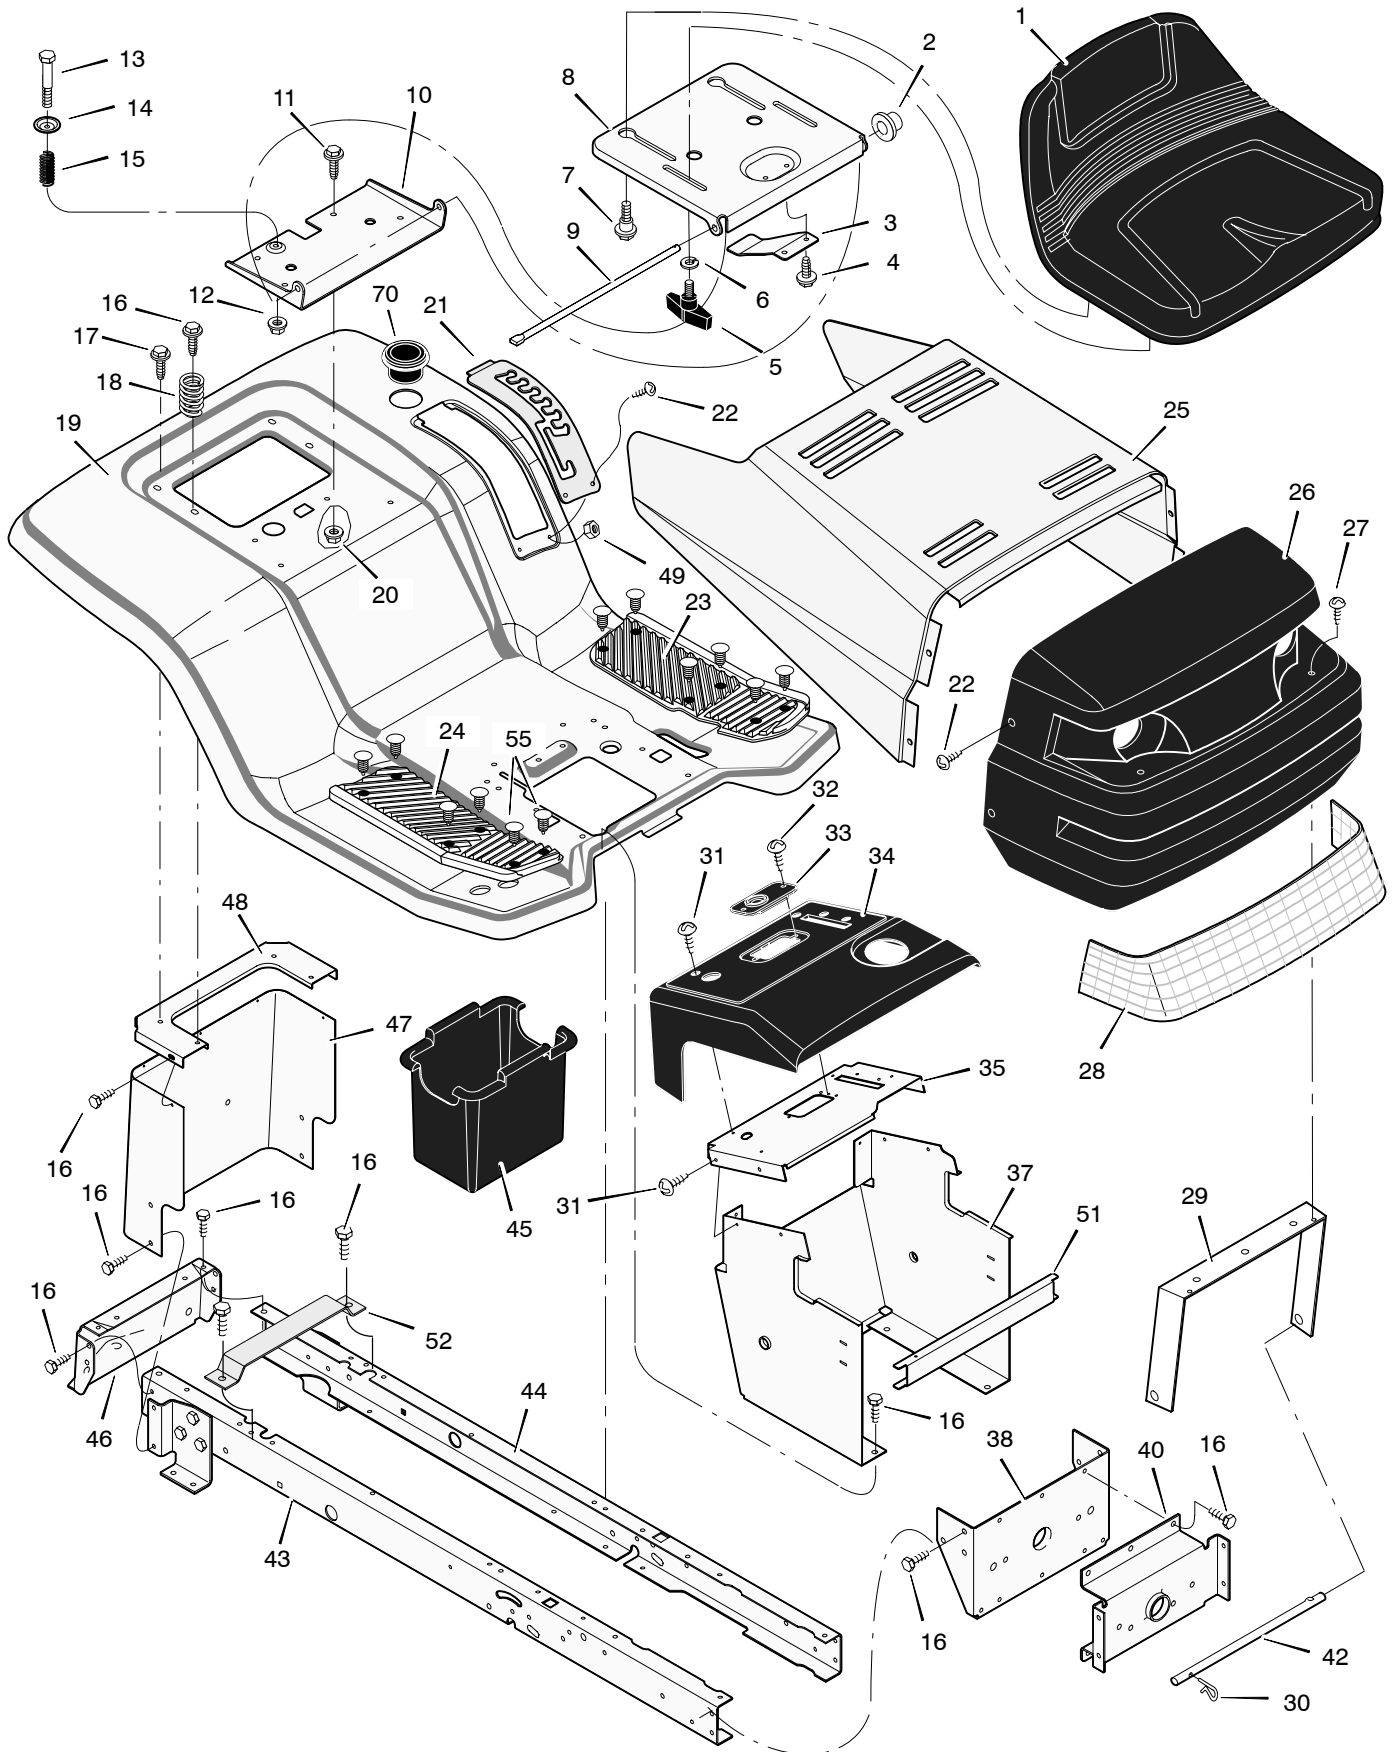


# MODEL 425607x52A

# REPAIR PARTS CHASSIS & HOOD

Key No.	Part No.	Description	Key No.	Part No.	Description
1	1001028	Seat	28	092334	Lens
2	028x23	Cap, Push On	29	092448	Brace, Grille
3	094057	Spring	30	0031x4	Pin, Hair
4	26x229	Screw	31	26x270	Screw
5	1001054	Bolt, Wing	32	26x238	Screw
6	017x47	Washer	33	094214	Bearing, Steering
7	009x56	Bolt, Shoulder	34	094218E701	Dash
8	094154E701	Support, Seat	35	094211E700	Plate, Dash
9	094156 Z	Rod, Pivot	36	093007E701	Panel, Access
10	1001648E700	Bracket, Pivot	37	095323E701	Support, Dash
11	001x45	Bolt	38	1001270E701	Bracket, Rear Hanger
12	015x89	Nut	40	094007E701	Axle, Hanger
13	009x55	Bolt, Shoulder	42	092332 Z	Rod, Pivot
14	094155 Z	Washer	43	1001928E701	Frame, Right
15	164x31	Spring	44	1001927E701	Frame, Left
16	26x249	Screw	45	690424	Container, Battery
17	26x263	Screw	46	1001002E701	Plate, Hitch
18	164x30	Spring	47	1001906E013	Panel, Rear
19	1001556E013	Deck, Seat	48	094186E013	Top, Rear Plate
20	015x88	Nut	49	015x81	Nut
21	094886E701	Plate, Index	51	094215E700	Channel
23	095408	Mat, Left	52	690482E701	Support, Battery
24	095409	Mat, Right	55	0193x1	Plug, Panel
25	092333E013	Hood	70	1001542	Holder, Cup
26	092350E701	Grille Assembly (Includes Lens)	--	F-050744L	Instruction Book & Parts List
27	26x239	Screw			

# MODEL 425607x52A

# REPAIR PARTS DRIVE ASSEMBLY

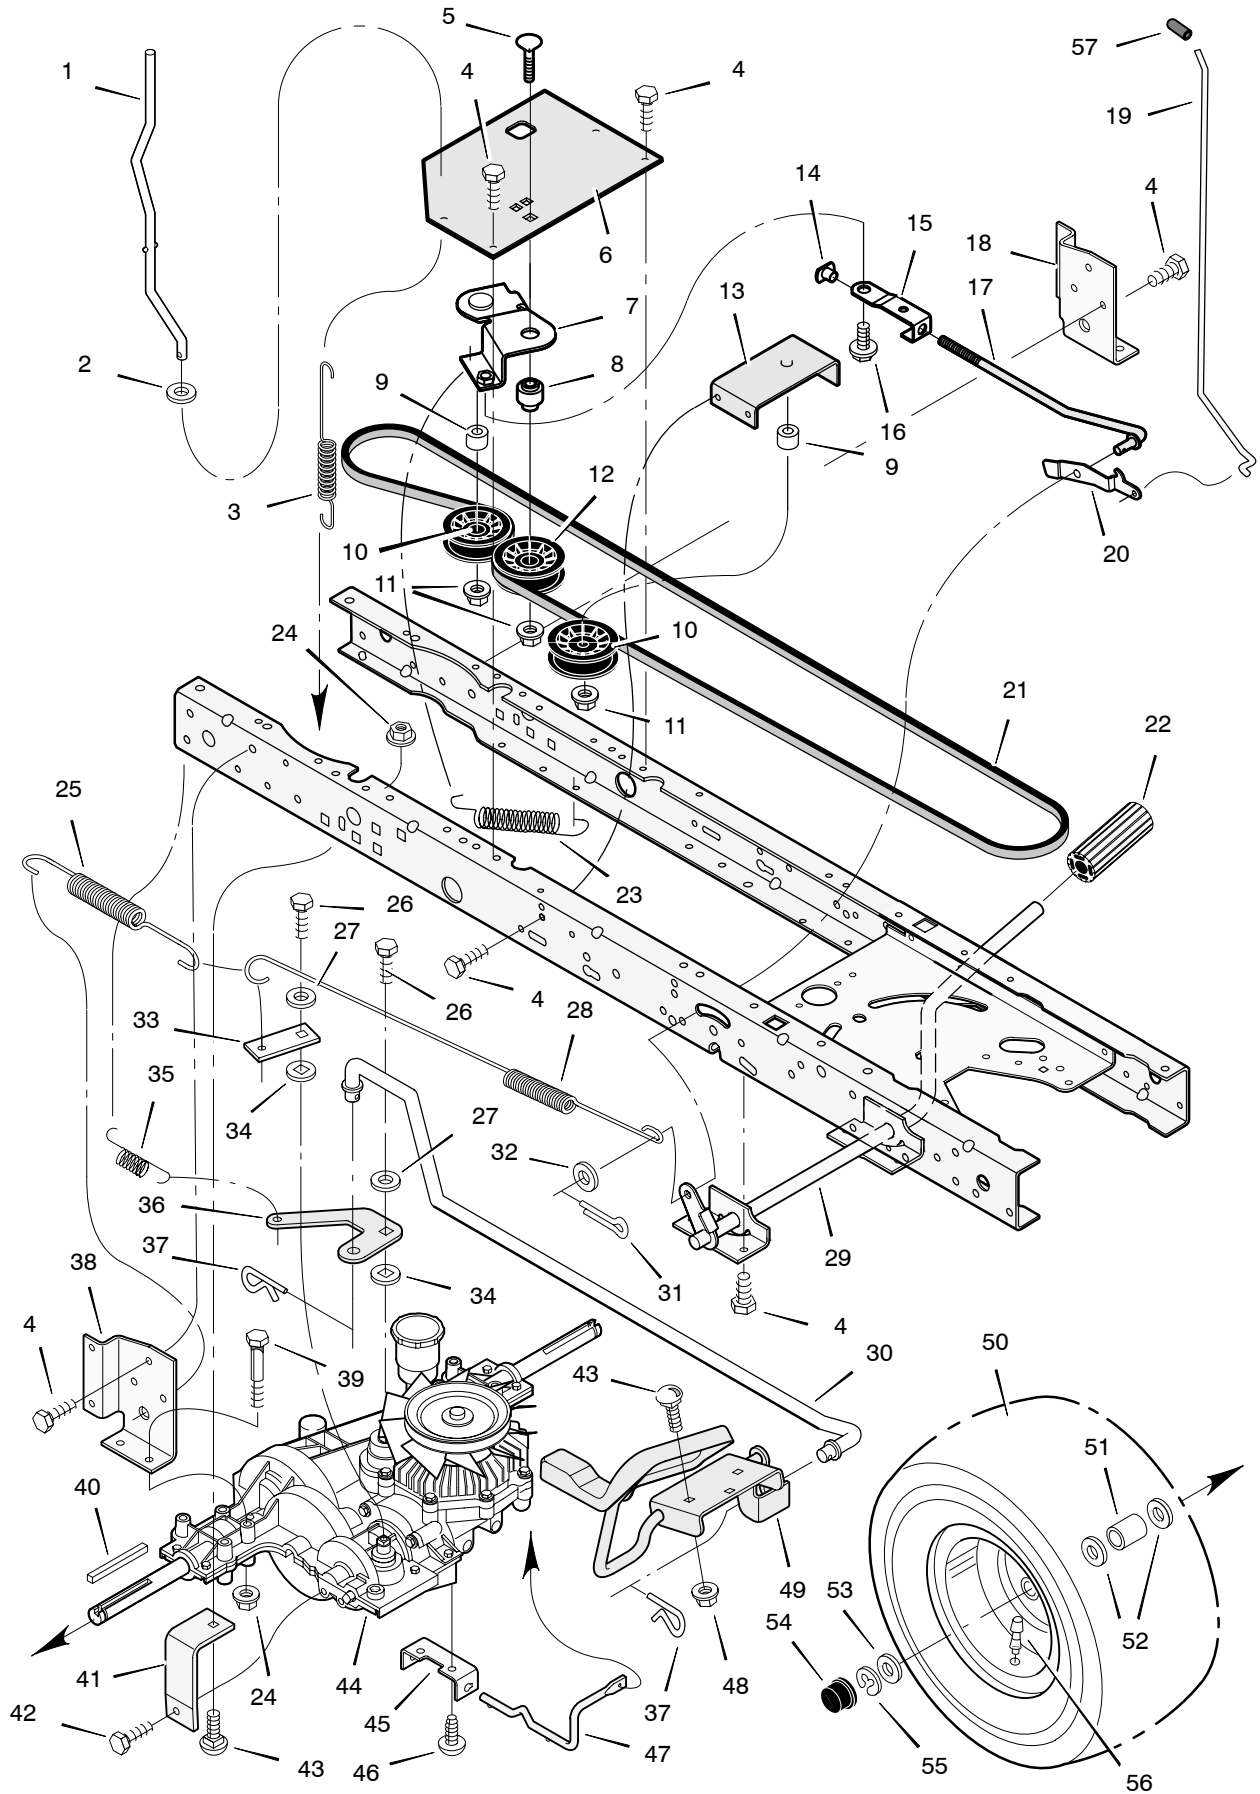


# MODEL 425607x52A

# REPAIR PARTS DRIVE ASSEMBLY

Key No.	Part No.	Description	Key No.	Part No.	Description
1	1001863	Rod, Dump	31	030x20	Pin, Cotter
2	017x44	Washer	32	017x48	Washer
3	165x136	Spring-Extension	33	094419 Z	Arm, Brake
4	26x249	Screw	34	17x148	Washer
5	002x92	Bolt, Carriage	35	165x127	Spring-Extension
6	1001108E701	Bracket, Idler Pivot	36	094418 Z	Arm, Control
7	1001018 Z	Assy-Idler Arm	37	0031x4	Pin, Hair
8	1001012	Pivot Bushing	38	094184E701	Bracket, T/A -RH
9	690369	Spacer	39	01x155	Bolt, Hex
10	690409	Idler Pulley	40	021553	Square Key -3/16
11	015x98	Locknut, Flange	41	095022E701	Strap-Torque
12	690410	Idler Pulley	42	26x216	Screw
13	1001097E701	Idler, Bracket Assy.	43	002x64	Bolt, Carriage
14	1001014	Nut-Tee	44	- - - * - - -	Transaxle, Dana Hydro 6500-3
15	1001007 Z	Link-Clutch	45	092603 Z	Bracket, Dump Valve
16	009x49	Shoulder Bolt	46	0025x9	Screw-Thread Form
17	1001013 Z	Rod-Clutch	47	093247	Rod-Dump Valve
18	094185E701	Bracket, T/A -LH	48	015x79	Nut, Hex Flange
19	1001271 Z	Rod-Parking Brake	49	1001231E701	Assy-Hydro Pedal
20	094045 Z	Latch, Parking Brake	50	092300-601	Wheel & Tire
21	37x144	V-Belt, Dana Hydro	- -	024380	Tire Only
22	021544	Pedal-Clutch/Brake	- -	407049	Tube Only
23	165x155	Spring-Clutch	51	690553 Z	Spacer
24	015x88	Locknut, Flange	52	17x160	Washer
25	165x92	Spring-Extension	53	17x195	Washer
26	06x105	Cap Screw	54	094618	Cap, Hub
27	017x38	Washer	55	0011x3	E-Ring
28	165x122	Spring-Brake	56	024373	Valve Stem/Cap
29	094038E700	Lever Brake/Clutch	57	091079	Grip
30	1001862	Rod, Control			

\* For information on Replacement Parts for this transaxle contact the manufacturer.


\*\* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

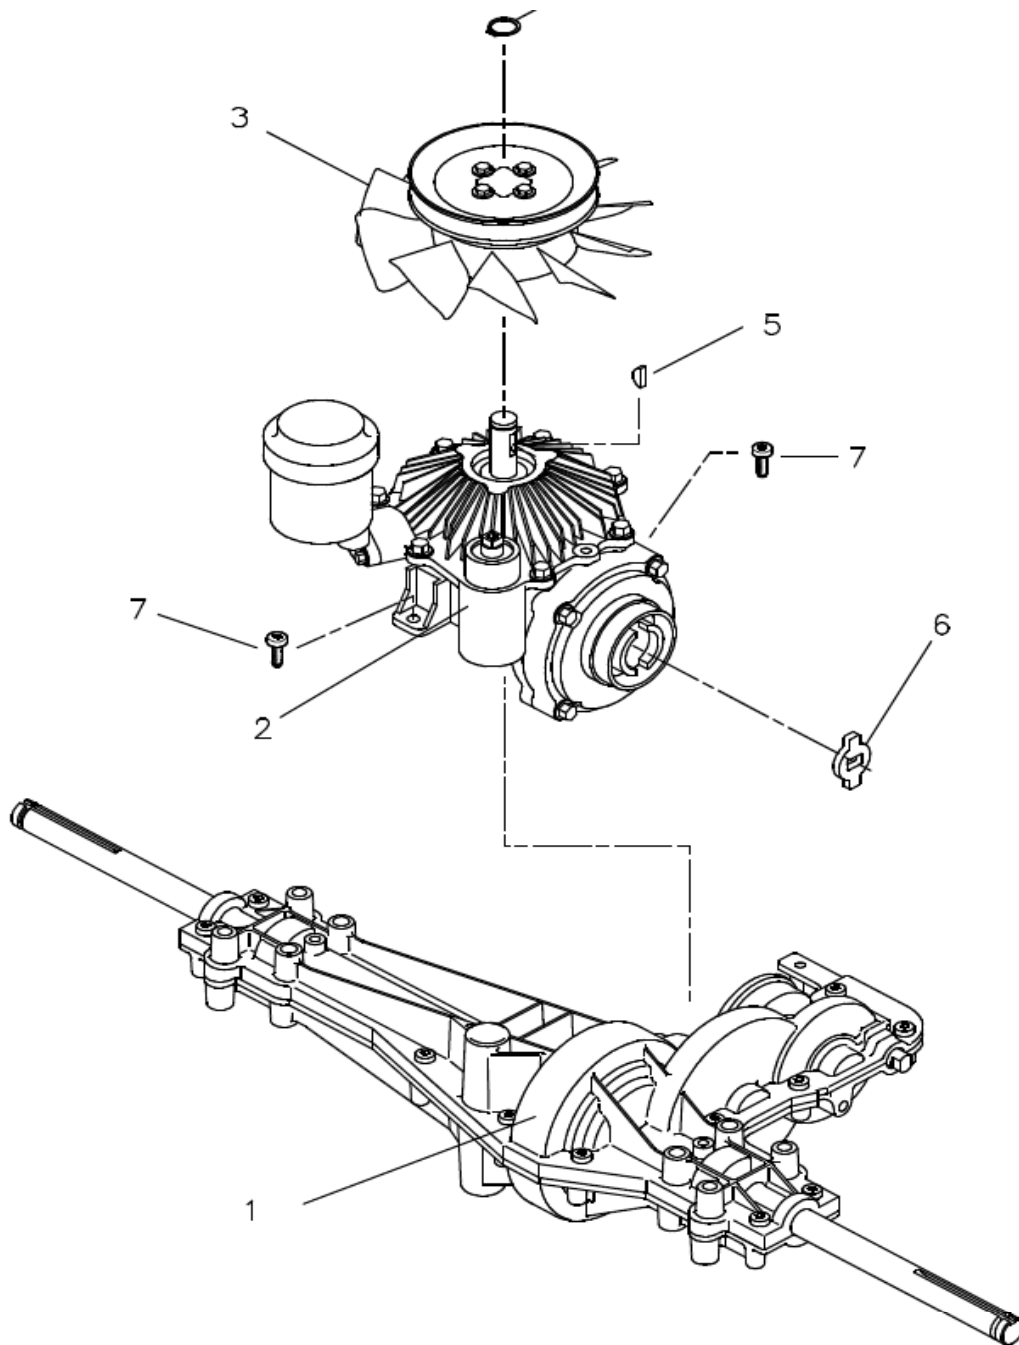

Pos	Vare nr. / Part no.	Qty	Beskrivelse	Description
1	6720	1	Gear / bagaksel	Gearbox
2	6447	1	Hydrostat pumpe/motor	Hydrostatic pump and engine
3	6203	1	Blæsehjul / remskive	Fan and pulley assy
4	5366	1	Låsering	Ring retaining
5	1375	1	Woodruff feder	Key woodruff
6	5356	1	Feder	Key drive
7	1919	2	Skrue	Screw tapping 1/4 -20
	6500-3	1	Komplet bagaksel med hydrostat	Hydrostatic Transaxle assy

# MODEL 425607x52A

# REPAIR PARTS STEERING

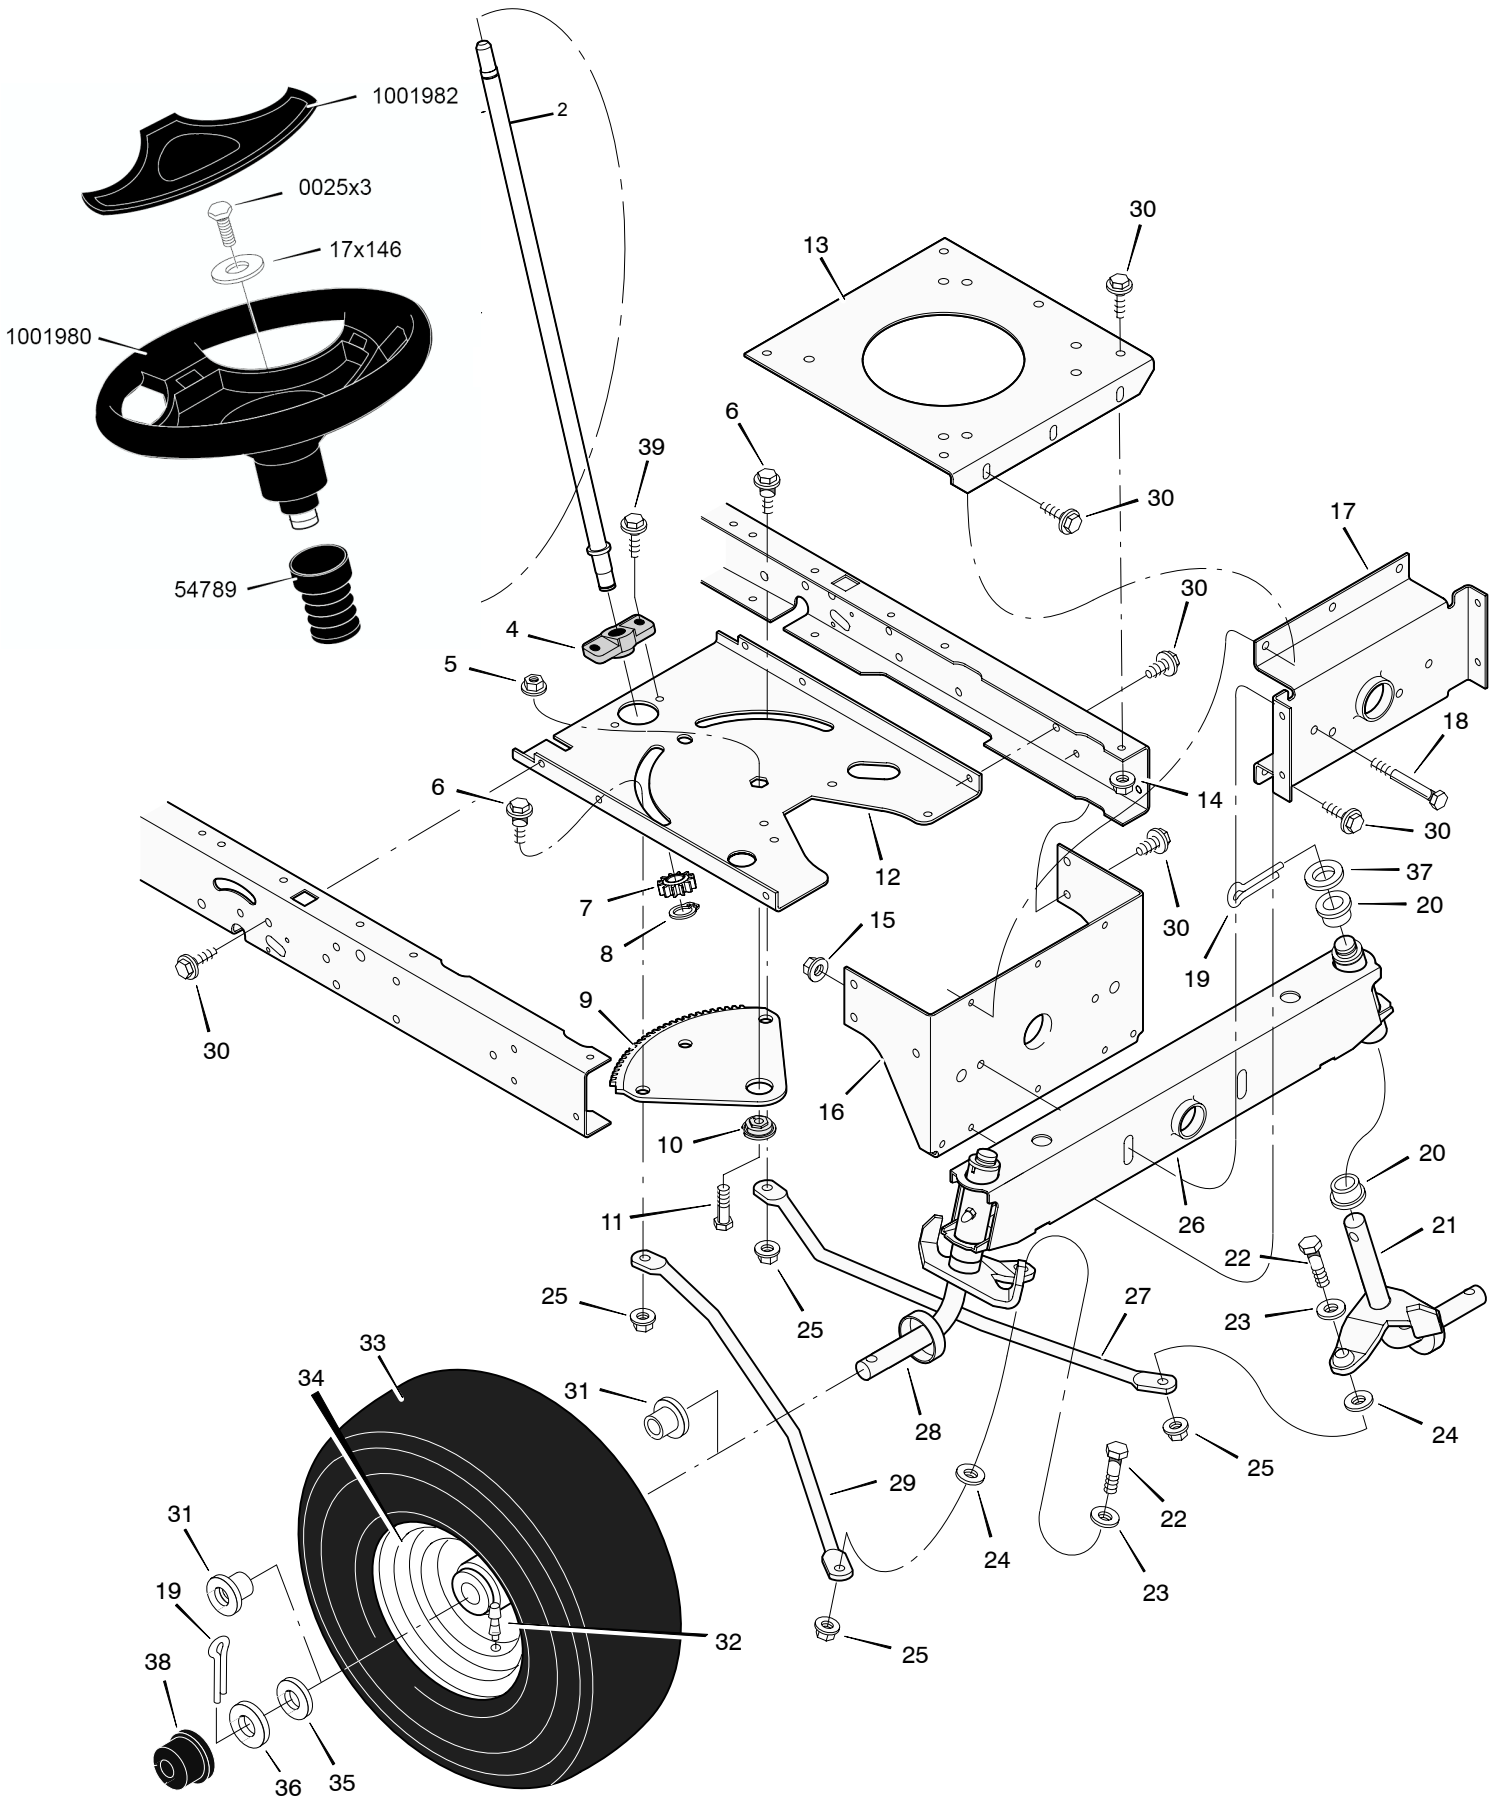

# MODEL 425607x52A


# REPAIR PARTS STEERING

Key No.	Part No.	Description	Key No.	Part No.	Description
1	095185	Wheel, Steering	23	17x104	Washer
2	690626	Post, Steering	24	017x53 Z	Washer
3	711326	Insert, Steering Wheel	25	015x84	Nut, Flange
4	094124	Bearing	26	690211	Axle Assembly
5	15x111	Nut, Flange	27	095329E701	Drag Link, Left
6	009x57	Bolt, Shoulder	28	094575E701	Spindle Assembly, Right
7	1001893	Gear, Pinion	29	095328E701	Drag Link, Right
8	011x25	Ring, Snap	30	26x249	Screw
9	094121	Gear, Sector	31	091334	Bearing, Wheel
10	094123	Bearing	32	024373	Stem, Valve
11	001x84	Bolt	33	091923	Tire *
12	1001121E701	Plate, Steering	--	407924	Tube
13	094006E701	Plate, Engine	34	094581-601	Wheel and Tire Assembly
14	015x88	Nut, Flange	35	17x195	Washer
15	15x118	Nut, Flange	36	17x192	Washer
16	1001270E701	Bracket, Hanger	37	17x113	Washer
17	094007E701	Axle, Hanger	38	094618	Hub Cap
18	01x146	Bolt	39	26x267	Screw
19	030x49	Pin, Cotter	40	054789	Bellows
20	690150	Bearing	41	0025x3	Bolt
21	094576E701	Spindle Assembly, Left	42	17x146	Washer
22	01x111	Bolt			

\* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

# MODEL 425607x52A

# REPAIR PARTS MOWER HOUSING SUSPENSION

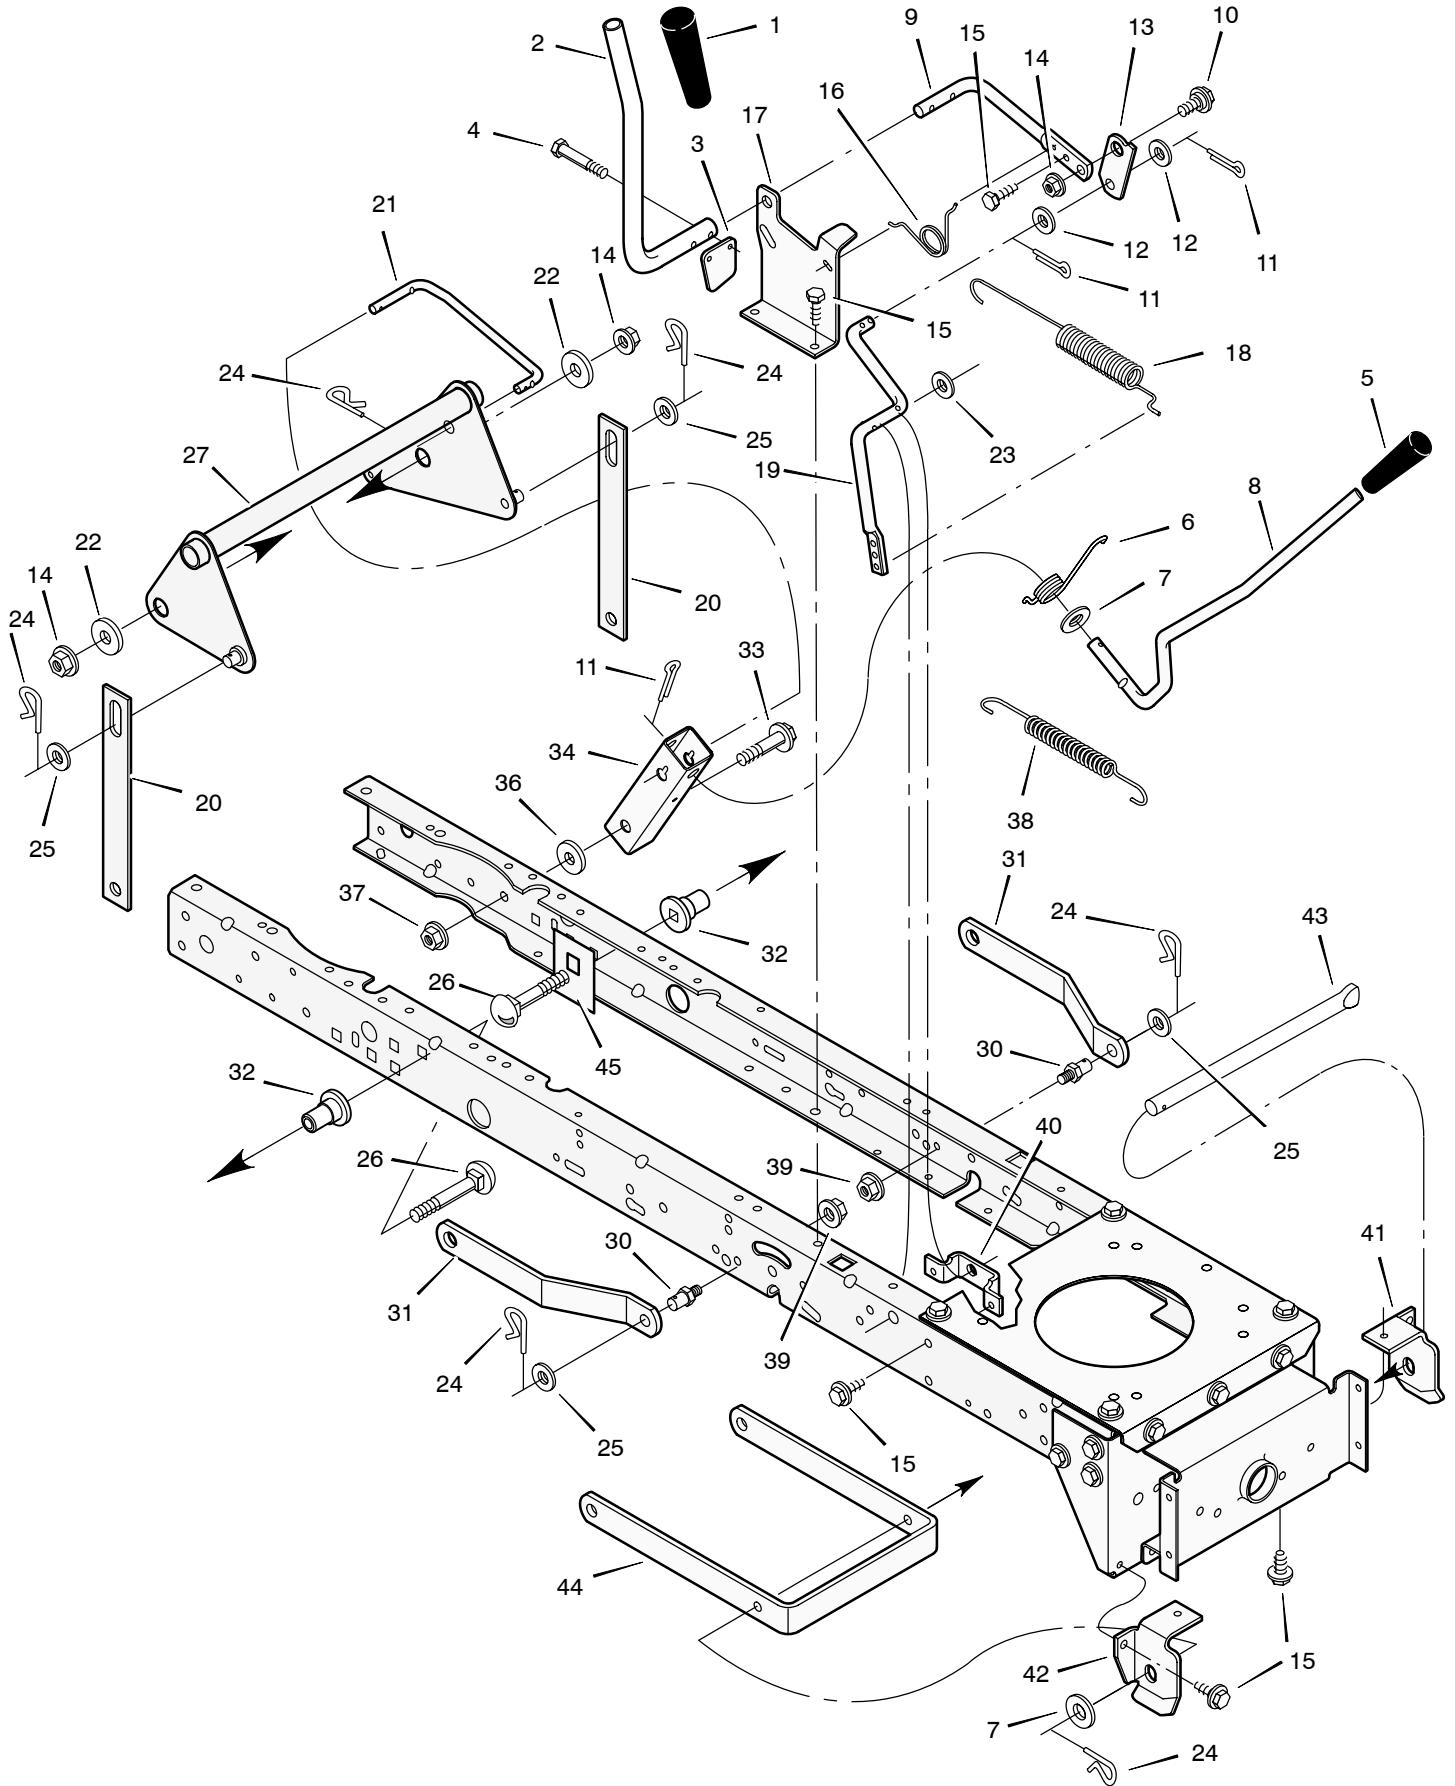




# MODEL 425607x52A

# REPAIR PARTS MOWER HOUSING SUSPENSION

<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>
1	092698	Grip, PTO	23	017x57	Washer
2	094346 Z	Handle, PTO	24	0031x4	Pin, Hair
3	094022 Z	Pad, Switch	25	017x91	Washer
4	0025x3	Bolt	26	002x85	Bolt, Carriage
5	092697	Grip	27	1001111E700	Lever Assembly, Lift
6	166x40	Spring	30	094067	Pin
7	17x103	Washer	31	094055E700	Bracket, Rear Suspension
8	690533	Handle, Lift	32	690151	Spacer, Lifter
9	094017 Z	Lever, PTO	33	009x53	Bolt, Shoulder
10	009x39	Bolt, Shoulder	34	094015E700	Bracket, Pivot
11	030x20	Pin, Cotter	36	17x191	Washer
13	094004 Z	Link, PTO	37	015x84	Nut, Flange
14	015x84	Nut, Flange	38	165x131	Spring
15	26x249	Screw	39	015x68	Nut, Flange
16	166x39	Spring	40	094005E700	Bracket, PTO
17	094018E700	Bracket, PTO	41	094027E700	Hanger, Left Deck
18	165x119	Spring	42	094026E700	Hanger, Right Deck
19	690394E700	Crank, PTO	43	094158 Z	Rod, Hanger
20	690212E700	Link, Lift	44	690539E700	Bracket, Suspension
21	690122E700	Link, Lift Handle	45	1001098E700	Plate, Stiffening
22	17x168	Washer			

# MODEL 425607x52A

# REPAIR PARTS MOWER HOUSING

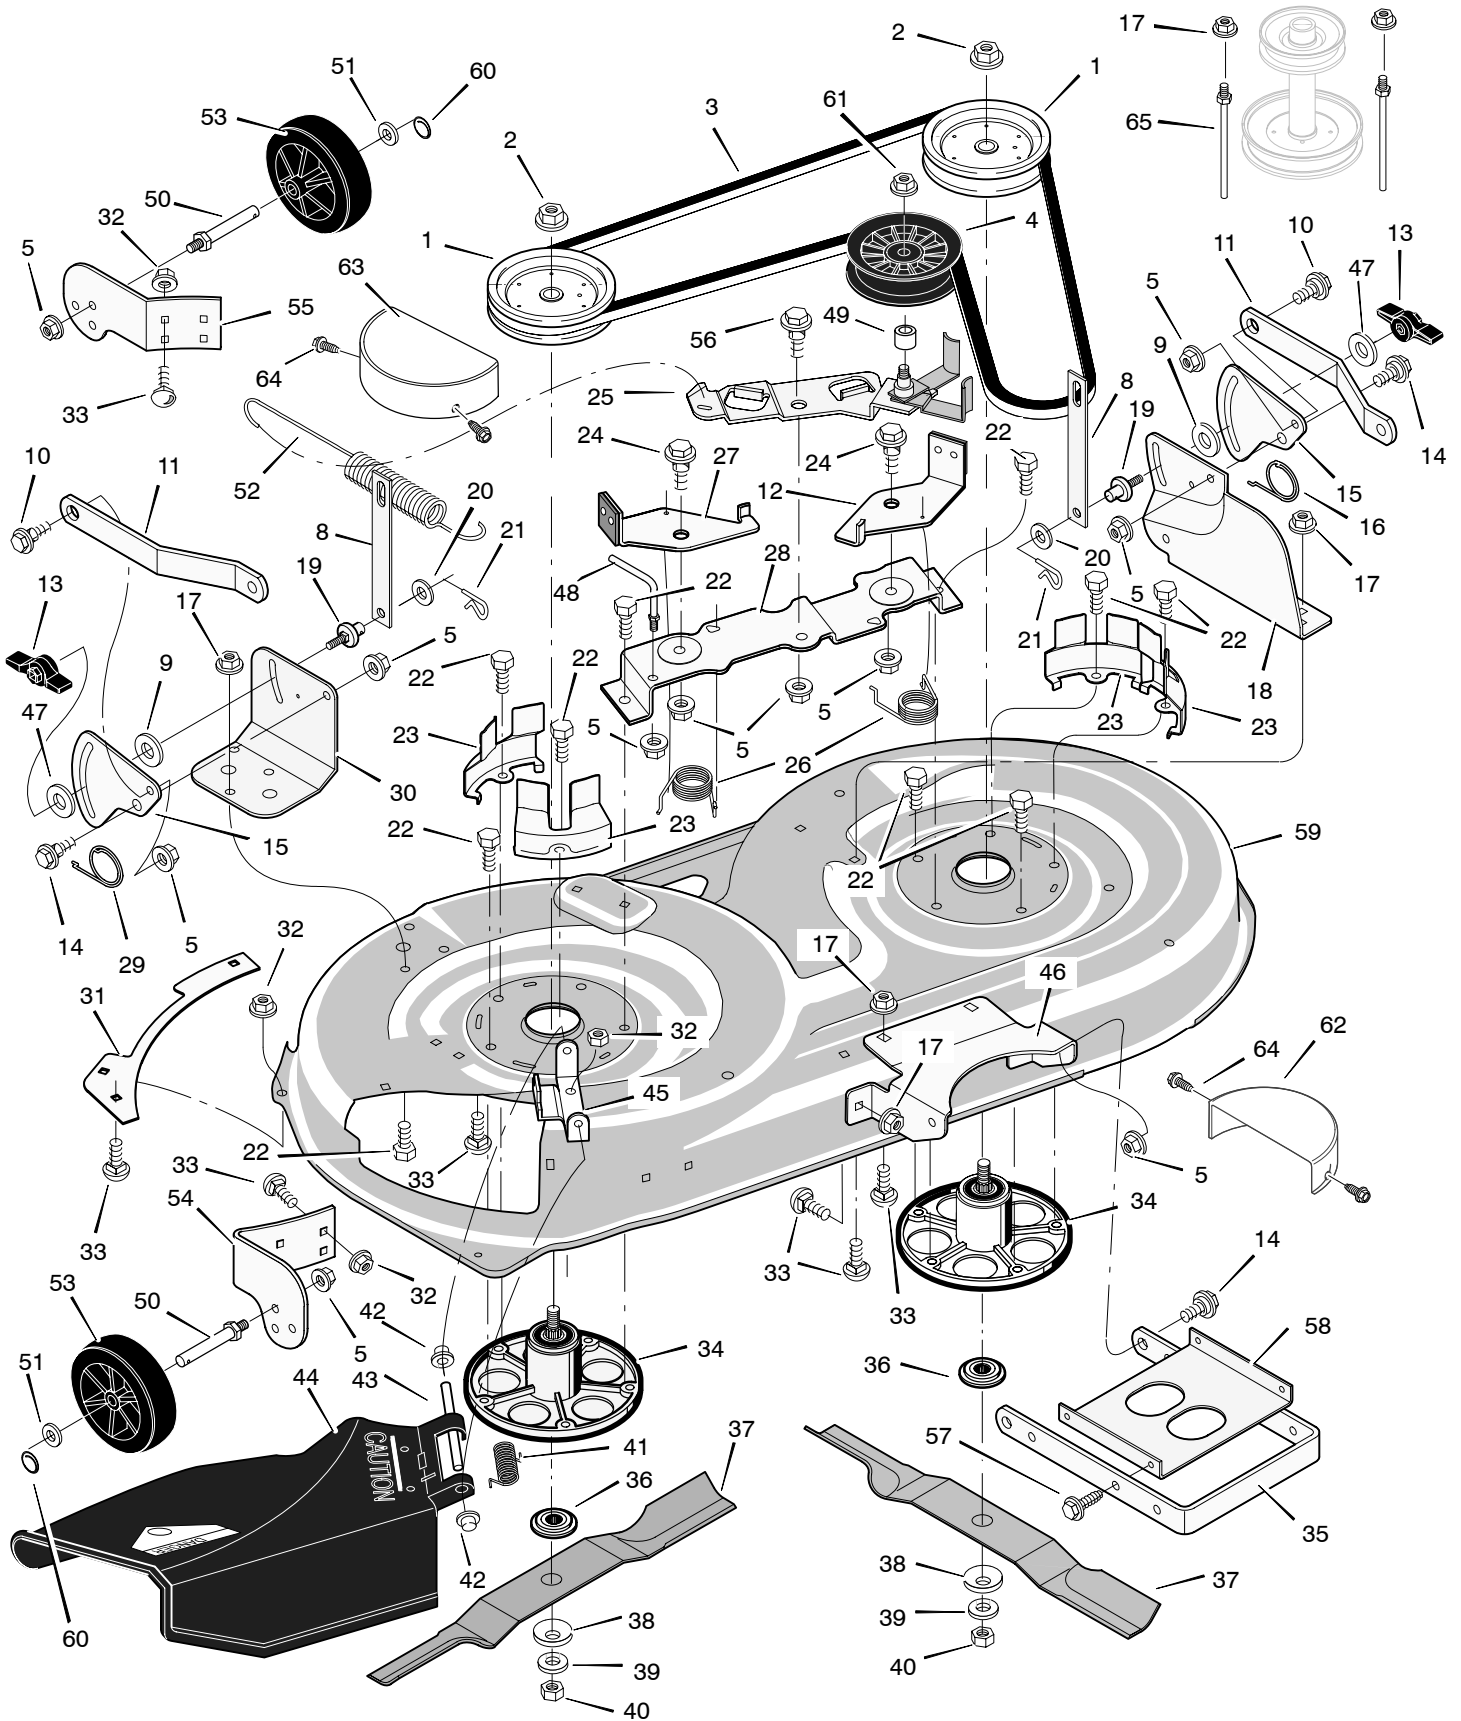

# MODEL 425607x52A


# REPAIR PARTS MOWER HOUSING

Key No.	Part No.	Description	Key No.	Part No.	Description
1	094199	Pulley, Jackshaft	35	690539E700	Bracket, Suspension
2	15x140	Nut, Hex	36	690411	Adapter, Blade
3	037x88	Belt, Mower Drive	37	1001429E701	Blade
4	690387	Pulley, Idler	38	17x166	Washer
5	015x84	Nut, Flange	39	17x165	Washer
8	690212E700	Link, Lift	40	15x100	Nut
9	094137	Pad, Friction	41	166x4	Spring
10	009x52	Bolt, Shoulder	42	028x23	Cap, Push On
11	094055E700	Bracket, Suspension	43	094957 Z	Rod, Deflector
12	094049E700	Pad Assembly, Left Brake	44	094707SE	Deflector Assembly
13	094068	Knob	45	094956E700	Bracket, Deflector Hinge
14	009x51	Bolt, Shoulder	46	094686E701	Bracket, Front Hanger
15	094128E700	Plate, Suspension	47	017x45	Washer
16	166x43	Spring	48	094781	Guide, Belt
17	015x79	Nut, Flange	49	690369	Spacer
18	094192E700	Bracket, Suspension	50	094025	Bolt, Axle
19	095194	Pin, Hanger	51	017x91	Washer
20	017x91	Washer	52	165x119	Spring, Extension
21	0031x4	Pin, Hair	53	092683	Wheel, Gage
22	0025x7	Bolt	54	1001260E700	Bracket, Right Wheel
23	094051E700	Cover, Pulley	55	092423E700	Bracket, Left Wheel
24	009x39	Bolt, Shoulder	56	009x72	Bolt, Shoulder
25	690408E700	Arm, Idler	57	26x249	Screw
26	166x41	Spring	58	094604E700	Stiffener
27	094047E700	Pad Assembly, Right Brake	59	094814E700	Housing, Blade *
28	094193E700	Bracket, Brake	60	031x11	Ring, Locking
29	166x42	Spring	61	015x98	Nut, Flange
30	094191E700	Bracket, Suspension	62	094668	Cover, Left Pulley
31	092426E700	Plate	63	094669	Cover, Right Pulley
32	015x88	Nut, Flange	64	26x263	Screw
33	002x53	Bolt, Carriage	1-64	7601032	Complete Mower Housing Assembly
34	1001200	Mandrell Housing	65	094066	Guide, Belt

\* Includes Key No. 17, 18, 30, 31, 32, 33, 45, 46, 53, 54, 55, and 56.

# MODEL 425607x52A

# REPAIR PARTS ENGINE MOUNT

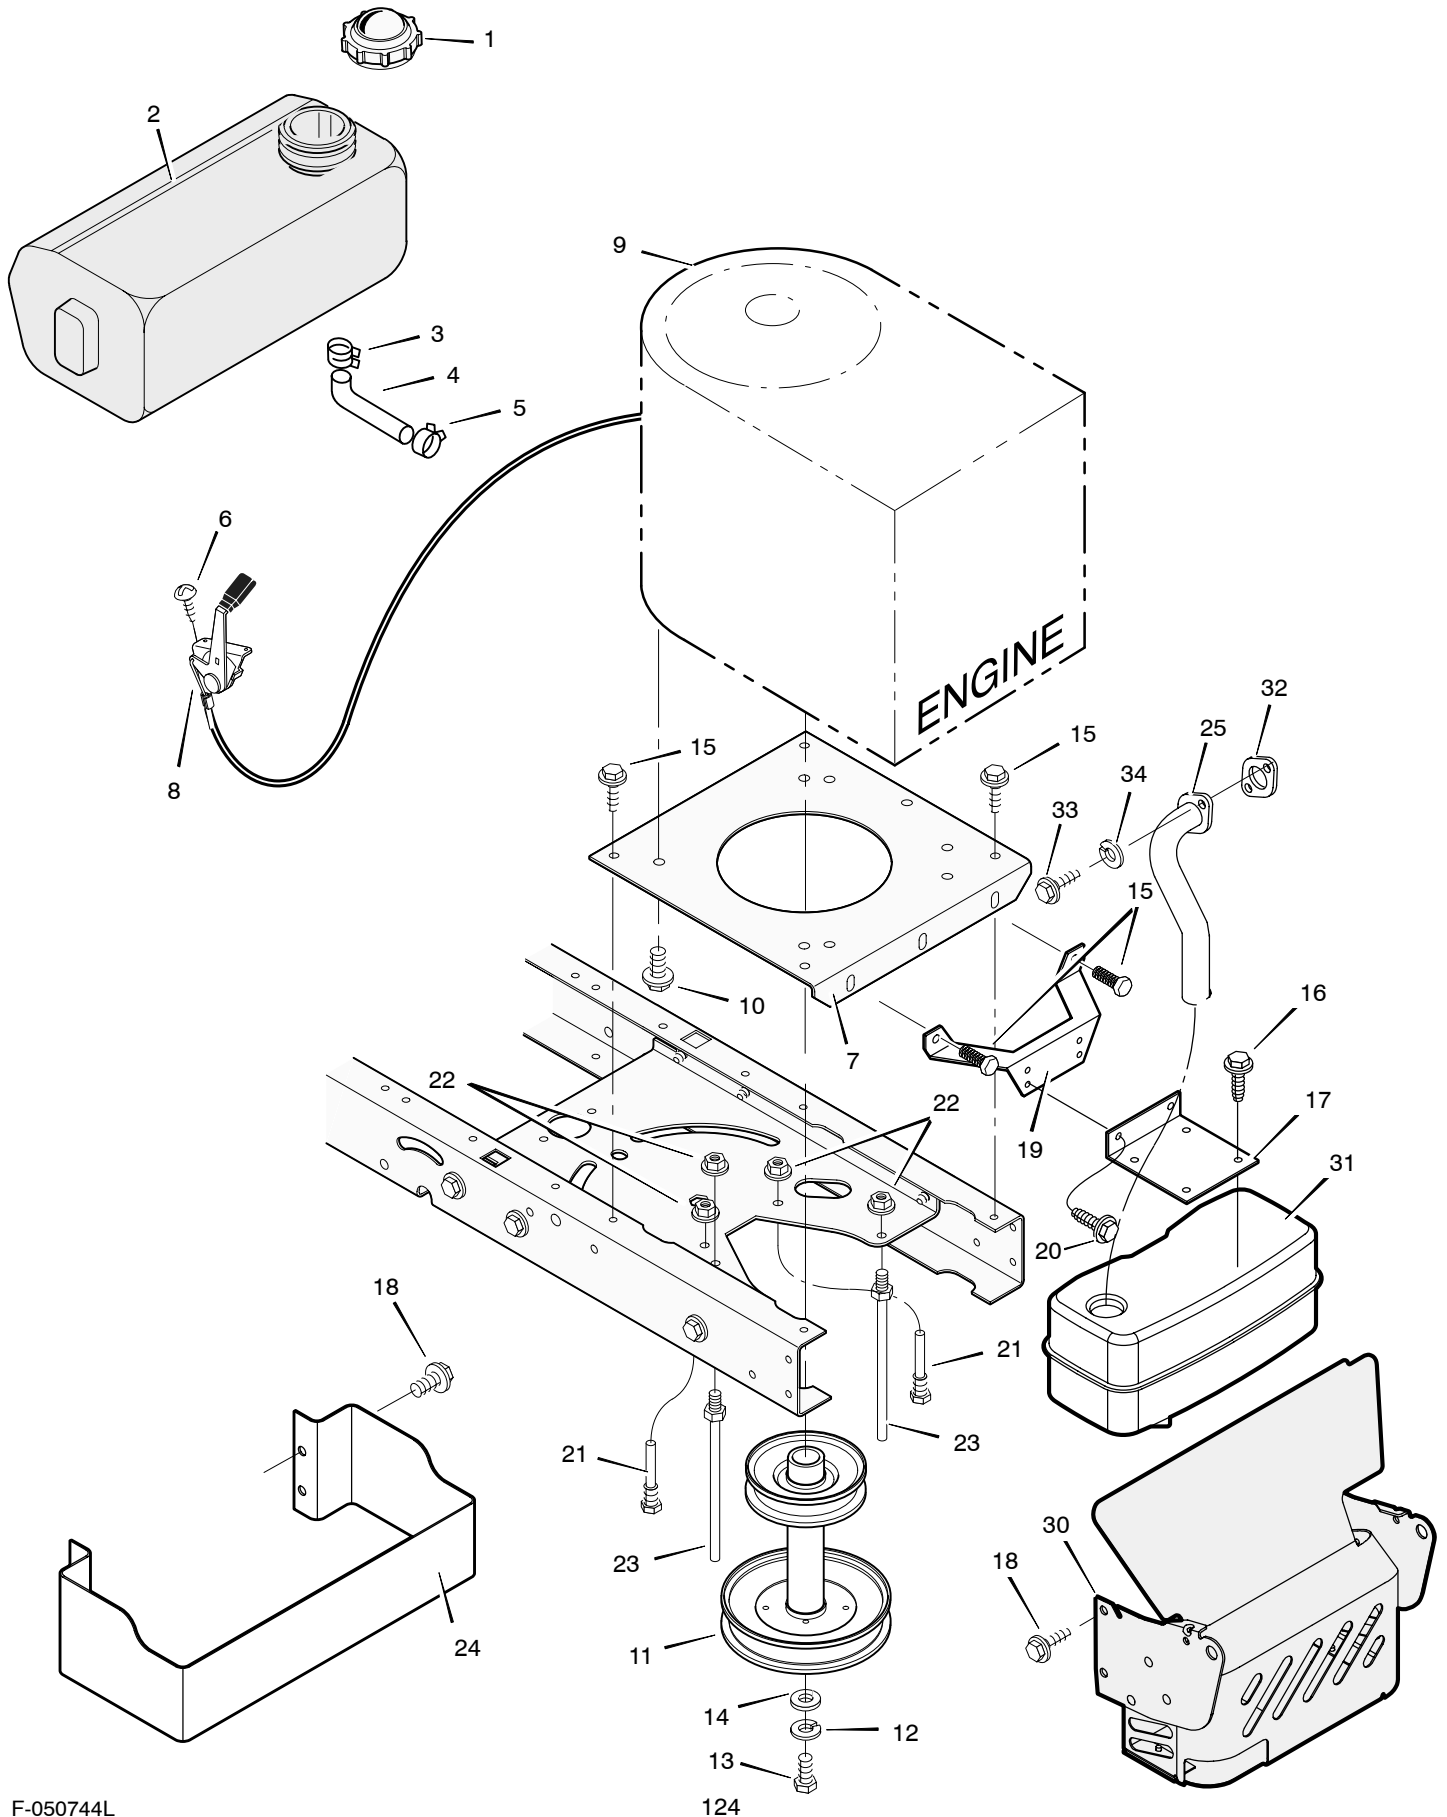


# MODEL 425607x52A

# REPAIR PARTS ENGINE MOUNT


<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>
1	092317	Fuel Cap **	16	26x229	Screw
2	1001947	Fuel Tank	17	690538E701	Bracket, Muffler
3	095197	Hose Clamp **	18	26x277	Screw
4	7601033	Fuel Line (Must cut to length) **	19	690537E701	Bracket, Muffler Mount
5	095197	Hose Clamp **	20	026x263	Screw
6	26x201	Screw	21	094384	Guide, Belt
7	094006E701	Plate, Engine	22	015x79 Z	Nut, Flange
8	092371	Throttle Control	23	094066	Guide, Belt
9	--- * ---	Engine, Briggs & Stratton	24	1001620-701	Guard, Heat Shield
10	0025x7	Bolt, Engine Mount	25	1001496	Exhaust Tube, Single
11	690440 Z	Stack Pulley Assembly	30	1001627-701	Shield, Heat
12	019x35	Lockwasher	31	094654	Muffler
13	01x140	Bolt, Hex	32	091309	Gasket
14	17x170	Washer	33	06x103	Screw
15	26x249	Screw	34	018x15	Washer

\* For information on Replacement Parts for this engine contact the manufacturer.

\*\* These parts are included with Key No. 2

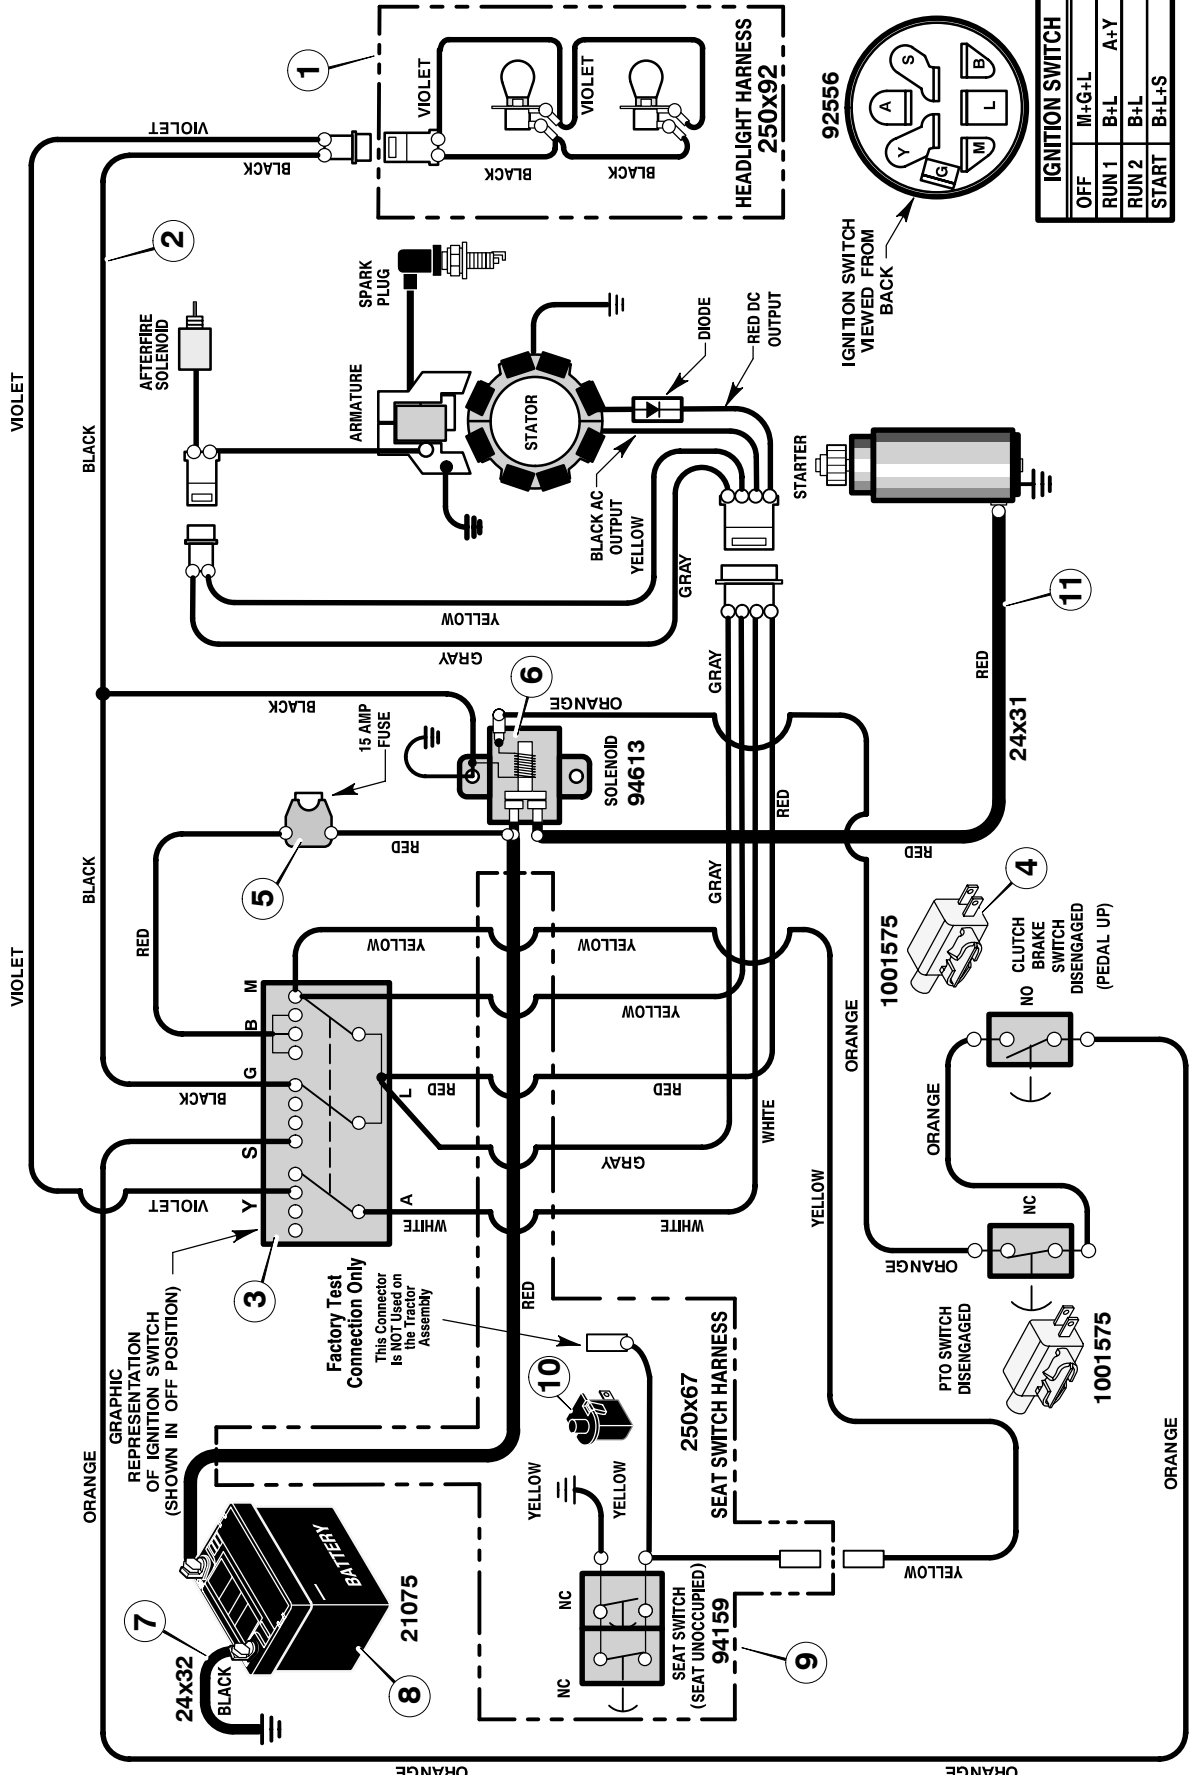

IGNITION SWITCH	
OFF	M+G+L
RUN 1	B+L A+Y
RUN 2	B+L
START	B+L+S

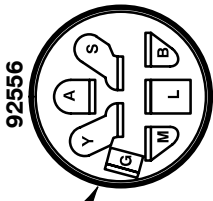

**MAIN HARNESS: 250x112**  
SEAT: 250x67; LIGHT : 250x92

<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>
1	250x92	Harness, Light Wire
	1001716	Socket, Light
	090084	Bulb, Light
2	250x112	Harness, Chassis Wire
3	092556	Switch, Ignition
	1001304	Key, Ignition
	091489	Nut, Hex
	091488	Cap, Ignition
4	1001575	Switch, Limit
5	302031	Fuse
	407078	Holder, Fuse
6	1002004	Solenoid
	26x229	Screw, Mounting
	15x116	Locknut
7	024x32	Cable, Battery Ground
	26x229	Screw, Ground Cable
8	021075	Battery
	002x82	Bolt, Carriage
	014x79	Wingnut
	690604	Boot, Battery -Positive
9	250x67	Harness, Seat Switch Wire
10	094159	Switch, Seat Sensor
11	024x31	Cable